



RESIN LOADERS

Resin Loaders

SWT Resin Loaders have been designed to work with Rigid brand or similar type vacuum hose. No gaskets are required for the operation of these resin loaders. Two lengths of 2.275 inch O.D. vacuum hose and a vacuum are all that is required to operate both loaders. (Vacuum hose and vacuum not supplied with loaders.)

Directions for Use:

1. Place one hose in the inlet side of the loader.
(See diagram)
2. Place one hose in the outlet side of the loader.
(See diagram)
3. Attach outlet hose to the vacuum side of the vacuum.
4. Hold end of inlet hose in your hand.
5. Place the resin loader on the top of the tank.
6. Switch on vacuum and begin to load resin while moving the inlet hose in a back and forth motion **allowing air to be drawn in with the resin.**

IMPORTANT WARNINGS!

1. Make sure the hose is not blocked at any time during loading!
2. Do not force the end of the hose into a bag of media!
3. Air needs to be drawn in with the media or your tank may implode!
4. Do not allow unqualified individuals to operate or use the resin loader!
5. Failure to correctly use the resin loader may result in catastrophic tank failure!



SM-MS800-4 Resin Loader
for 4" #8 UN tank opening
(up to 1.5" riser)




SM-MS800 Resin Loader
for 2.5" NPSM tank opening
(0.812" to 1.375" riser)

SM-MS800-ADPT (Not shown) Optional Adapter converts resin loader ports to 2" spigot PVC pipe size (2.375" O.D.)



INLET SIDE >>
(MEDIA IN)

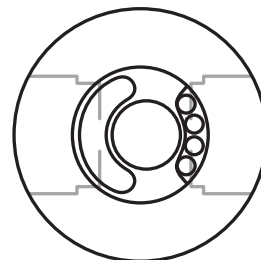

>> OUTLET SIDE
(AIR OUT)