
## NXT ELECTRONIC STAGER CONTROLLER PART NUMBER MATRIX


STAGER & PROGRAM	ROTARY PILOT STAGER	NOTE: See following pages for Program details.	
51-06 ÷ 51-10 ÷	<ul> <li>Softener or Filter, 6 Port (Brass)</li> <li>Softener, Timed Brine Draw &amp; F</li> <li>Two Tank Filter w/ Sequential R</li> <li>Softener, N.O. In/Out, N.C. All C</li> </ul>	ill, 8 Port (Brass) egeneration, 8 Port (Brass)	
1 NOTES: This cat	CAT 6 COMMUNICATION CA = Less Communication Cable = With 25 ft (7.6 m) CAT 6 Comm ble is used to connect up to four (4) s cable is required than the total nu	unication Cable NXT controllers.	
	ELECTRICAL TRANSFORME Less Transformer (Customer mi Transformer Mounted Inside En Accepts 115V, 208V, or 240V 50	ust supply 24VAC to controller) closure; 24VAC, 40 VA Output	
<u>1st AUX.</u> <u>SWITCH</u> S	FIRST EXTRA SWITCH ON R		]
* A to R == 1 ==	SECOND EXTRA SWITCH OF None Cam Position Switch Active (I & 51-10 Stager with Notch in both 51-10 Stager with Notch in both	O not used) Backwash Positions	
PRESSURE 0 :	<ul> <li>r to indicate cam position, NOT a non-</li> <li><u>PROGRAM OF STAGER</u></li> <li>Standard (Vent to Open)</li> <li>Inverted (Pressure to Open)</li> </ul>	umber.	 
	USED TO KEEP A TANK IN S None Solenoid Included Only used for systems: Twin Alternating System 7 Multiple Tank Alternating Syst Demand Recall (Progressive 1)	em 9	
STAGER REVISION	= 48 & 51 Series Stagers		

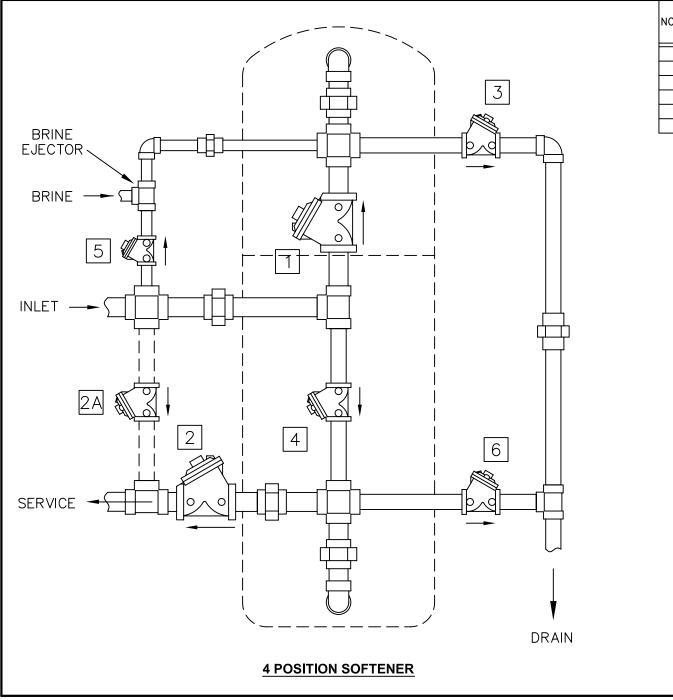



NOTCH	POS.	FUNCTION	(		RTS TED TE 1)	VAL OP		4
A	4	SERVICE			,2	1,		
В								$\tilde{\mathbf{a}}$
С	1	BACKWASH			,4	3,4		$\bigcirc$
D								SO
E	2	BRINE			,6	5,6		<u>U</u>
F	3	RINSE		1,	,6	1,6	,ZA	
ر هر ا	1 0 2 1	SERIES 48-00 STAGER PO 2 3 0 2 2 2 3 1 2 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 1 2 1 2		S	ER 5 2 2 2 3	60 6		<b>FION SOFTENE</b>
2.	ALL OTH ALL VAI	HER PORTS PRESSURI	A) NO	RMAL	LY OF	ΡΈΝ,		ER (48-
3. DUI	VALVE : RING RE	TO CLOSE. VALVE 24 2A REQUIRED FOR RA GENERATION. /ALVE AND DRAIN LIN	w w#	ATER	BYPAS	SS		-00
NO.	T SHOW	N. ED PIPING TO VALVE 2A TO BE DOTTI IITIAL RELEASE DESCRIPTION Safe Water 996 Bluff City Bl 847-888-6900	ED NO NO E Tect Vd, Elg WWV	DNE DNE CO nnol gin, IL w.swt	MSM JWB DWN ogies 60120 water.c	15APR03 31JUL01 DATE 6, Inc.	MSM APVD	STAGEF
	SCALE				NER			


## **4 POSITION SOFTENER**

DWG. NO. 4800PRGM SCALE DRAWN N/A JWB DATE 3 31 JUL01

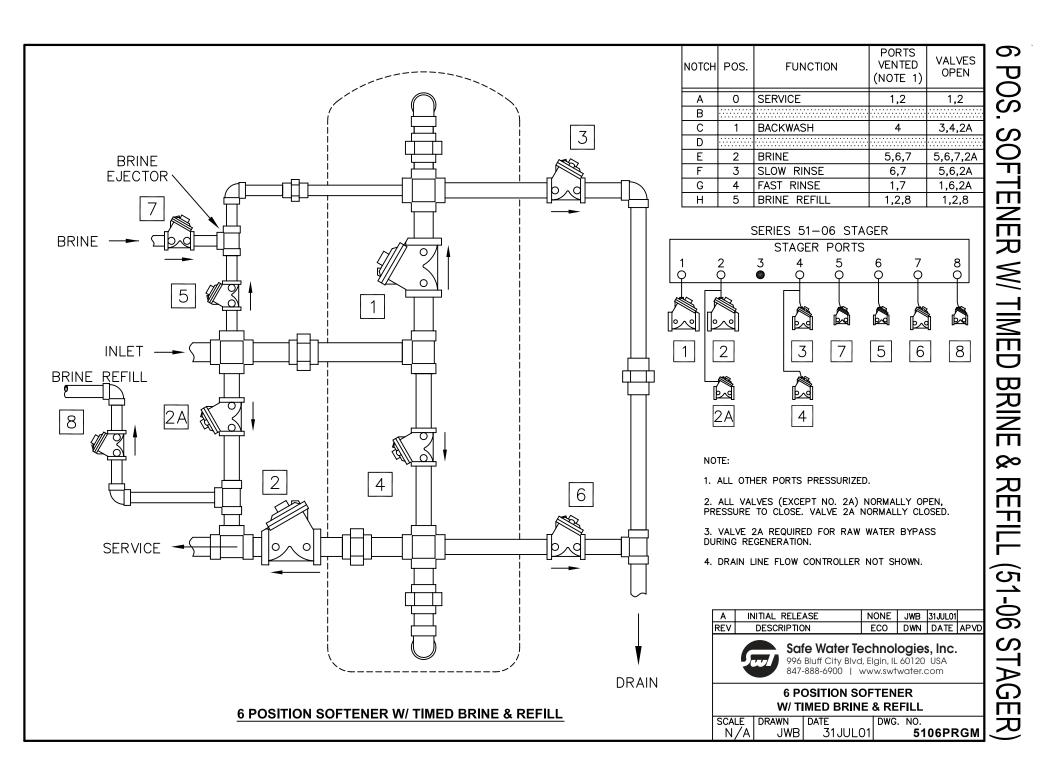

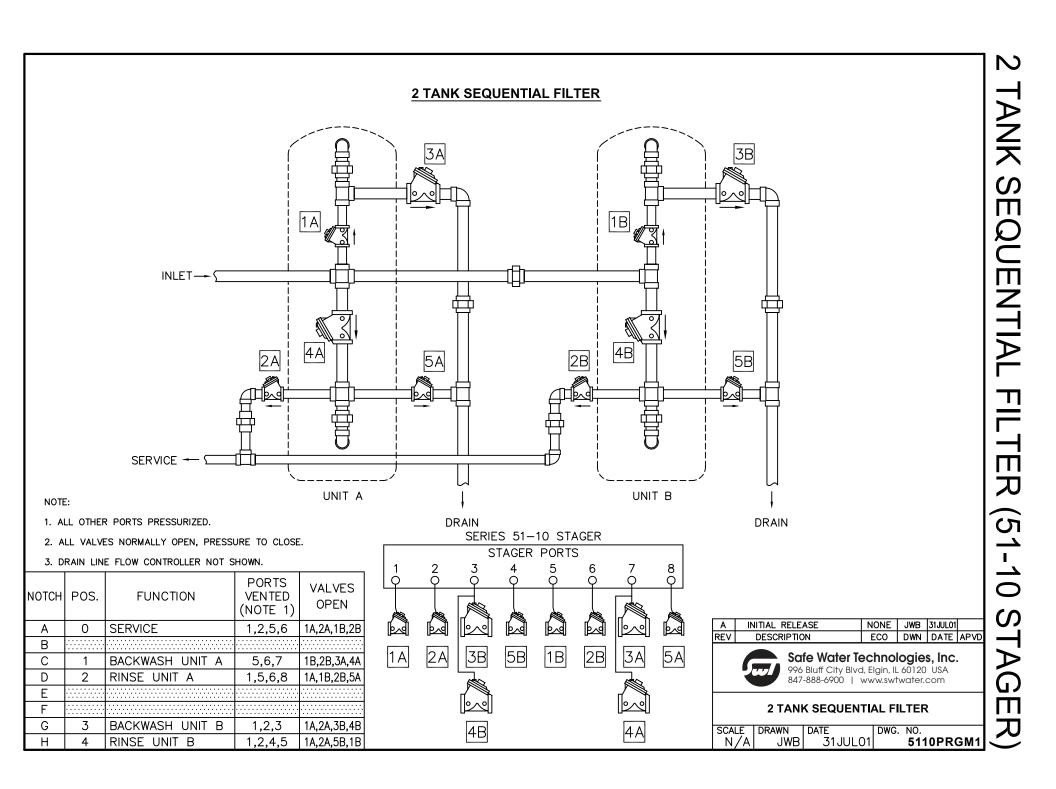


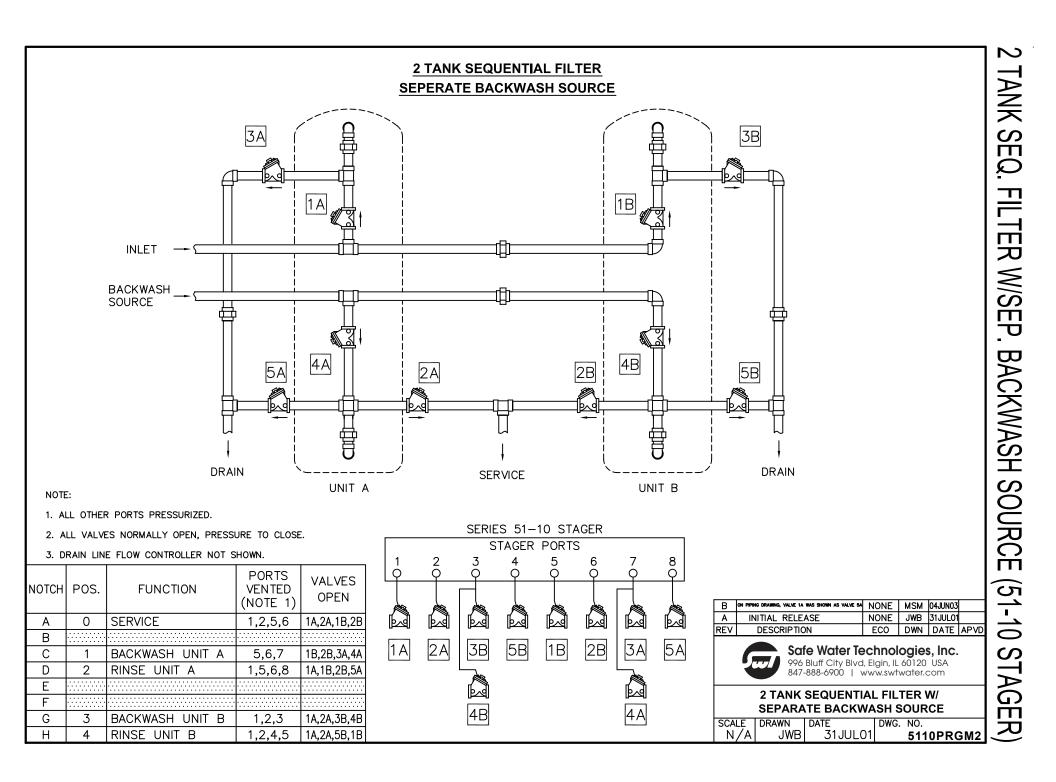

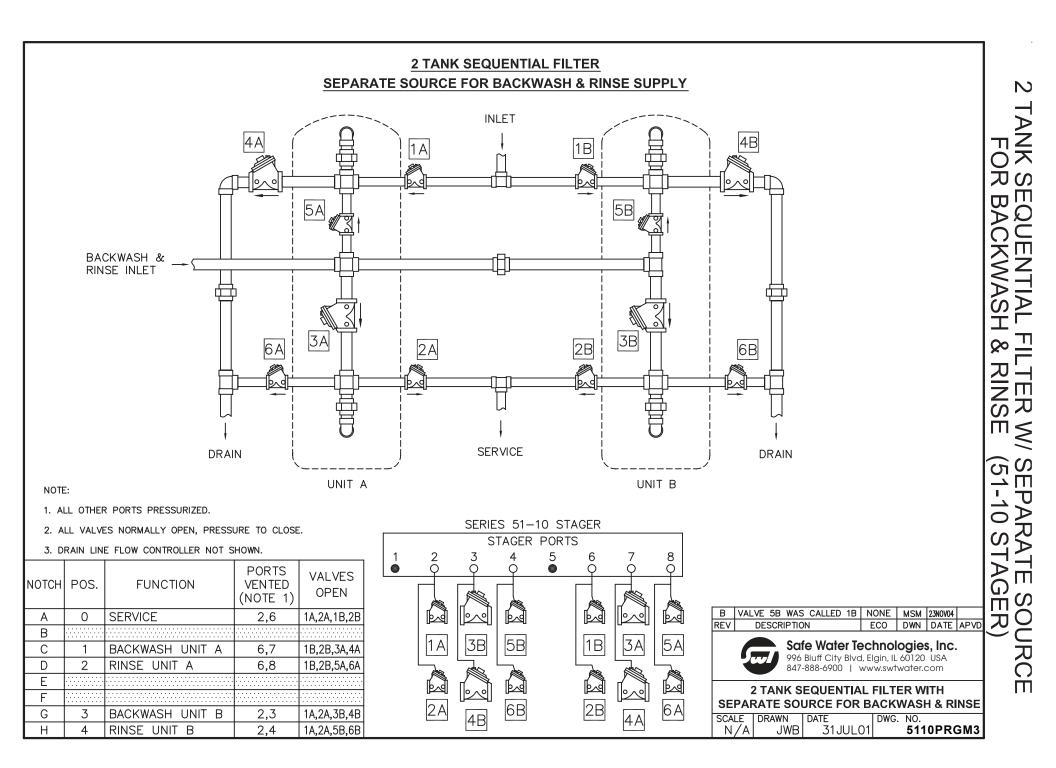

NOTCH	POS	FUNCTION	PORTS PRESSURIZED					ALV OPE	
A*	0	Service	1, 2, 3, 4, 5, 6	1,	2				
В									
С									
D									
E	1	Backwash	5, 6	5,	6				
F									
G	2	Brine	3, 4	3,	4				
Н	3	Fast Rinse	1, 3, 4, 5	1,	3,	4,	5		

\* 1st aux cam notched in service for homing

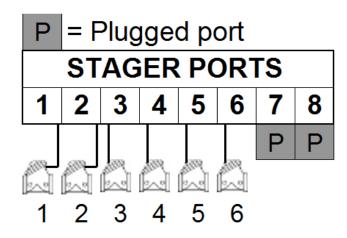

Valves 1, 2 Normally Closed, pressure to Open

Valves 3, 4, 5, 6 are Normally Open, pressure to Close

А	Release				7/25/16
REV	DESCRIPT	ION	ECN		DATE
	996 E	Bluff City Blvd	, Elgin, IL 6	ด้า20 เ	USA
	SER	IES 51-SC	) STAG		
	SER PRC	IES 51-SC DUCT D	) STAG	NG	
SCALE N/A	SER	IES 51-SC	) STAG		. NO.