

## R048 SERIES 6-PORT STAGER VALVE PART NUMBER MATRIX

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER:

R 0 4 8 - - - - - 0 B

<u>PROGRAM</u>		<u>STAGER PROGRAM TO BE PROVIDED</u>
00	=	4-Position Softener
01	=	3-Position Filter
03	=	4-Position Softener (Butterfly Cam)
04	=	2-Position Filter
12	=	4-Position Filter with Air Scour -OR- 4-Position Upflow Softener
83	=	3-Tank Sequential Filter
84	=	4-Tank Sequential Filter
85	=	5-Tank Sequential Filter
SS	=	Special Stager Program per Drawing No.
TA	=	2-Tank Alternating

<u>ENCLOSURE</u>		<u>FEATURES</u>
7	=	No Enclosure, Stager Mounted on Square Backplate Only, Gasket Included for NEMA 4 Use
F	=	NEMA 4X Fiberglass Box (10 inch x 8 inch x 6 inch)

<u>ELECTRICAL</u>		<u>FEATURES</u>
1	=	115 VAC / 60 Hz, Standard
2	=	220 VAC / 50 Hz / 60 Hz
5	=	24 VAC / 50 Hz or 60 Hz
9	=	12 VAC / 50 Hz or 60 Hz

<u>1st AUX SWITCH</u>		<u>FEATURES</u>
0	=	NONE
A to F	=	Cam Position Switch Active
S	=	Service Return (Homing)
W	=	Status Lights, Available for TA Only

<u>2nd AUX SWITCH</u>		<u>FEATURES</u>
0	=	NONE
A to F	=	Cam Position Switch Active
S	=	Service Return (Homing)

<u>OPERATING MODE</u>		<u>FEATURES</u>
0	=	Standard Mode—Vent to Open, Pressure to Close (for Normally Open Valves)
1	=	Inverted Mode—Vent to Close, Pressure to Open (for Normally Closed Valves)

