

R051 SERIES 8-PORT STAGER VALVE PART NUMBER MATRIX

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER:

R 0 5 1 - - - - - - 0 B

<u>PROGRAM</u>		<u>STAGER PROGRAM TO BE PROVIDED</u>
06	=	6-Position Softener, Timed Brine & Refill
07	=	5-Position Softener, Timed Brine
09	=	5-Position Softener, Timed Refill
10	=	2-Tank Sequential Filter
11	=	Filter with Air Scour
12	=	Softener with Brine Reclaim
86	=	6-Tank Sequential Filter
87	=	7-Tank Sequential Filter
SS	=	Special Stager Program per Drawing No.

<u>ENCLOSURE</u>		<u>FEATURES</u>
7	=	No Enclosure, Stager Mounted on Square Backplate Only, Gasket Included for NEMA 4 Use
F	=	NEMA 4X Fiberglass Box (10 inch x 8 inch x 6 inch)

<u>ELECTRICAL</u>		<u>FEATURES</u>
1	=	115 VAC / 60 Hz, Standard
2	=	220 VAC / 50 Hz / 60 Hz
5	=	24 VAC / 50 Hz or 60 Hz
9	=	12 VAC / 50 Hz or 60 Hz

<u>1st AUX SWITCH</u>		<u>FEATURES</u>
0	=	NONE
A to H	=	Cam Position Switch Active
S	=	Service Return (Homing)

<u>2nd AUX SWITCH</u>		<u>FEATURES</u>
0	=	NONE
A to H	=	Cam Position Switch Active
S	=	Service Return (Homing)

<u>OPERATING MODE</u>		<u>FEATURES</u>
0	=	Standard Mode—Vent to Open, Pressure to Close (for Normally Open Valves)
1	=	Inverted Mode—Vent to Close, Pressure to Open (for Normally Closed Valves)